


## SAFETY NOTE

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance shall not be made by children without supervision.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. **WARNING:** the drive shall be disconnected from its power source during cleaning, maintenance and when replacing parts.
6. The instructions shall state that the A-weighted emission sound pressure level of the drive is equal to or less than 70 dB(A), e.g. by writing  $L_{pA} \leq 70 \text{ dB(A)}$ .
7. The mass and the dimension of the driven part shall be compatible with the rated torque and rated operating time.
8. The type of driven part the drive is intended for.
9. **WARNING:** Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions.
10. Do not allow children to play with fixed controls. Keep remote controls away from children.
11. Frequently examine the installation for imbalance and signs of wear or damage to cables and springs. Do not use if repair or adjustment is necessary.
12. Watch the moving shutter and keep people away until the shutter is completely closed.
13. **WARNING:** Important safety instructions. Follow all instructions, since incorrect installation can lead to severe injury.
14. Before installing the drive, remove any unnecessary cords and disable any equipment not needed for powered operation.



# DM35(45)RZ/SF, DM59RZ/SF


## Instruction | A-03



### Features

- Built-in Receiver
- Jog & Tilt
- Switch Direction
- Stall Protection
- Radio Lock
- Wind-sun-rain Sensor Compatible

### Fields Of Application



The motor is suitable for roller blinds and venetian blinds.


### Specifications

Working Temperature: $-10^{\circ}\text{C} \sim +70^{\circ}\text{C}$	Radio Frequency: 433.925MHz
Rated Voltage: AC120V,60Hz; AC 230V,50Hz	Thermal Protection Time: > 4 minutes

\* For more motor models and specific torque, please refer to the nameplate.


### Attention

Never drop, knock, drill or submerge the motor. Keep the power cable in right position as following. Important safety instructions to be read before installation. Incorrect installation can lead to serious injury and will void manufacturer's liability and warranty.

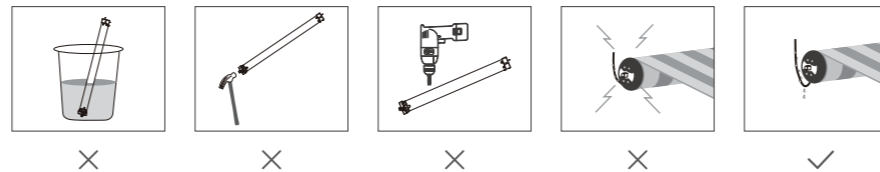


### Wiring


Three wires: AC 230V,50Hz; AC120V,60Hz

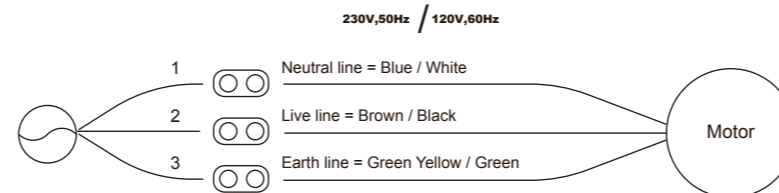


### Motor Installation

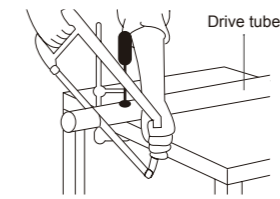


Step 1 Cut drive tube to required length.

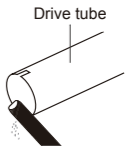

Step 2 Ensure tube edge is clean and burr-free.

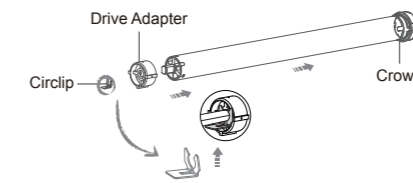

Step 3 Mount correct crown & drive adapter on the motor. Make sure drive adapter fits firmly and crown rotates freely.

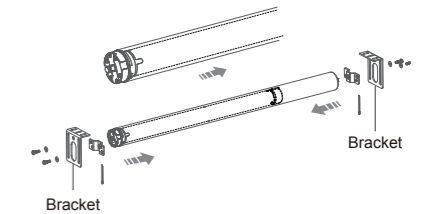

Step 4 Align the notches on the crown and drive adapter with the drive tube, slide and fit the motor into drive tube. Mount idler and bracket on both ends.

### Caution

1. Do not expose motor to humid or extreme temperature conditions.
2. Do not drill into motor.
3. Do not cut the antenna and keep it clear from metal objects.
4. Do not allow children to play with this device.
5. If power cable or connector is damaged, do not use.
6. Ensure correct crown and drive adaptor are used.
7. Ensure power cable and aerial is clear and protected from moving parts.
8. Cable routed through walls shall be properly isolated.
9. Motor is to be mounted in horizontal position only.
10. Before installation, remove unnecessary cords and disable equipment not needed for powered operation.
11. Installation and programming to be performed by a qualified professional, use or modification outside the scope of this instruction may void warranty.





Important Safety Instructions To Be Read Prior To Operation.

### Setting Notice

Please read following points of attention carefully before setting.

1. Please use accessories kits to protect the wires which are not used.
2. Operating:
  - ① The valid interval of the emitter button is 10s, the emitter will quit the set after 10s.
  - ② The motor will jog or beep for hint, please do the next step after the hint.
3. If the emitter lost, please setting up again with new emitter.
4. One motor can store maximum 10 channels; after fully stored, if pair new channels, only the last one will be covered circularly.

## Button Instructions

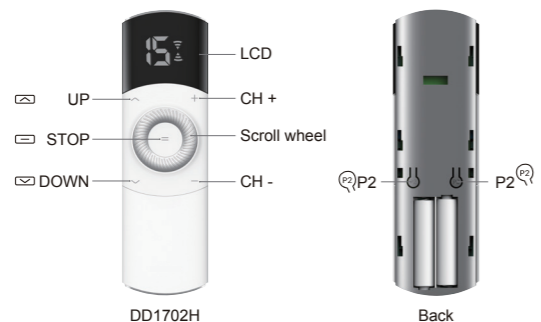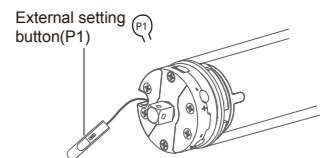

DD1702H

Back

### Functions of External setting button (P1)

- Cycle Operation:** Press P1 button once and every press the motor will run upward → stop → downward → stop circularly.
- Pairing or Pairing Additional Emitter:** Press P1 button for 2S, motor will jog once, release P1 button, long beeps once, the motor is ready for pairing or pairing additional emitter.
- Radio Lock:** Press and hold P1 button for 6S, the motor will jog once, release P1 button and beep twice, the motor enters radio lock status, the motor won't receive any signal; press P1 button once to disable Radio Lock.
- Switch Direction:** Press and hold P1 button for 10S, the motor will jog once, release P1 button and beep 3 times, the running direction of the motor has been changed.
- Reset to Factory Mode:** Press and hold P1 button for 12S, the motor will jog once, release P1 button and beep 4 times, the motor has been reset to factory mode.




### Essential Settings

Step 1 to 2 must be completed to ensure proper operation.


## 1 Pairing Emitter

### Method one




Press P1 button for 2S, the motor jogs once, release P1 button and long beeps once, or Re-power on the motor (1 jog and long beeps once), within 10S, press STOP on new emitter for 2S (2 jogs and 3 beeps), the motor has been paired successfully.

### Method two



Press P2 (1 jog and 1 beep) and P2 (1 jog and 1 beep) on existing emitter, press P2 on new emitter (2 jogs and 3 beeps), new emitter has been paired to the motor successfully.

### Method three



Press P2 (1 jog and 1 beep) and P2 (1 jog and 1 beep) on existing emitter, press STOP on new emitter for 2S (2 jogs and 3 beeps), new emitter has been paired to the motor successfully.

\* (a) as existing emitter, (b) as new emitter to pair.

## 2 Switch Rotating Direction (Optional)

If press UP, the motor runs downward, try below to switch direction



Within 30S after the emitter is successfully added, press and hold UP and DOWN buttons simultaneously for 2S (1 jog), the direction has been switched successfully.

## 3 Activate / Deactivate Jog / Tilt Mode



Press and hold UP and DOWN buttons simultaneously for 5S (1 jog), press STOP (1 jog and long beeps once), Jog / tilt mode is activated. If motor jogs twice and beeps 3 times, Jog / tilt mode is deactivated.

\* Short press UP or DOWN, the motor will jog running; Press UP or DOWN for more than 2S, the motor continuous run.


## 4 Delete Additional Emitter

### Method one



Power on motor again (1 jog and long beeps once), within 10S, press STOP of the desired emitter for 2S (2 jogs and 3 beeps), emitter is deleted successfully.


### Method two



\* (a) and (b) are both coded emitters, this operation only removes the emitter (b).

Press P2 (1 jog and 1 beep), press P2 again (1 jog and 1 beep), Press P2 button once of the desired emitter (2 jogs and 3 beeps), the emitter has been deleted successfully.

## 5 Remove All Emitters






Press P2 (1 jog and 1 beep), STOP (1 jog and 1 beep), and P2 (2 jogs and 3 beeps), all emitters are deleted.

## 6 Percentage Limits Setting




When the motor stops at any position, press and hold UP and STOP button simultaneously for 2S, the motor will run upwards and downwards once automatically and the upper and lower limits has been memorized by Hub, then the motor can be percentage control.


\* After the motor has set the percentage control, scroll the wheel counterclockwise to run upward or scroll the wheel clockwise to run downward.

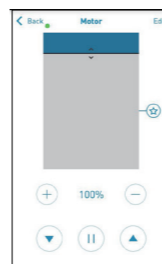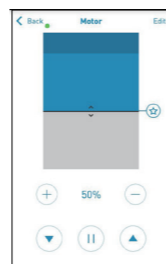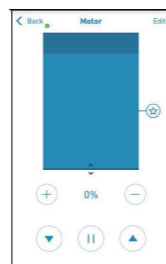


### Pair With Wind-sun Sensor For Roller Blinds.

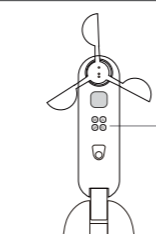


Solar powered wind-sun-rain sensor

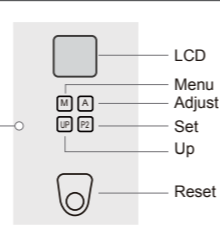

Hard-wired wind-sun-rain sensor

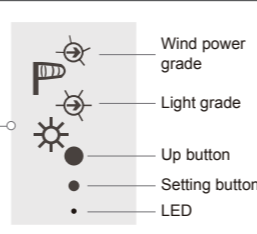

## 7 Adding / Deleting Wind-sun-rain Sensor

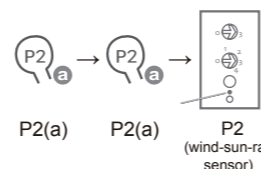

Press P2 (1 jog and 1 beep) and P2 (1 jog and 1 beep) on existing emitter, press P2 on the wind-sun-rain sensor (2 jogs and 3 beeps), wind-sun-rain sensor is paired to the motor.

• Repeat same procedure will delete sensor.

\* Add multiple wind-sun-rain sensors only currently valid, other are covered; After the wind-sun-rain sensors is added successfully, the sun detection is turned on.


## 8 Enable / Disable Wind-sun-rain Sensor



Press P2 (1 jog and 1 beep), UP (1 jog and 1 beep), STOP (1 jog and long beeps once), wind-sun-rain sensor is disabled. If motor jogs twice and beeps 3 times, wind-sun-rain sensor is enabled.

\* The factory default wind-sun-rain sensor is enabled.


## 9 Enable / Disable Sun Detection



\* The factory default sun detection is enabled.

Press P2 (1 jog and 1 beep), P2 again (1 jog and 1 beep), UP (1 jog and long beeps once), Sun detection is disabled. If motor jogs twice and beep 3 times, Sun detection is enabled.

## 10 Enable / Disable Rain Detection



\* The factory default rain detection is enabled.

Press P2 (1 jog and 1 beep), P2 again (1 jog and 1 beep), DOWN (1 jog and long beeps once), Rain detection is disabled. If motor jogs twice and beeps 3 times, Rain detection is enabled.

## 11 Wind-sun-rain Control

When the wind is strong or the light is weak, the sensor sends signal to motor to run to the upper limit, when the light is strong, the sensor sends signal to motor to run to the lower limit. Once the strong wind command is received, the emitter can't control the sensor within 8 minutes. When the wind-sun-rain sensor is on, if the controller doesn't receive any response signal from the sensor, then the motor will be closed and the emitter will enter jog mode until receiving the response signal from the sensor.

## Quick Index

Settings	Steps
1 Pair Additional Emitter	Stop (hold down 2s)
	P2(a) → P2(a) → P2(b)
	P2(a) → P2(a) → Stop(b) (hold down 2s)
2 Switch Rotating Direction	Up + Down (hold down 2s)
3 Activate / Deactivate Jog / Tilt Mode	Up + Down (hold down 5s) → Stop
4 Delete Additional Emitter	Stop(b) (hold down 2s)
	P2(a) → P2(a) → P2(b)
5 Remove All Emitters	P2 → Stop → P2
6 Percentage Limits Setting	Up + Stop (hold down 2s)
7 Adding / Deleting Wind-sun-rain Sensor	P2(a) → P2(a) → P2 (wind-sun-rain sensor)
8 Enable / Disable Wind-sun-rain Sensor	P2 → Up → Stop
9 Enable / Disable Sun Detection	P2 → P2 → Up
10 Enable / Disable Rain Detection	P2 → P2 → Down

## Troubleshooting

Issues	Possible causes	Solution
The motor has no response	Power Failure Or Incorrect Connection	Double check power and cable connections, follow wiring instructions.
	emitter battery is low capacity	Replace battery
	Radio interference / shielding	Check antenna on motor is intact and exposed. Check for possible source of radio interference.
	Out of radio control range	Try control within closer range
The emitter can't control single motor	Multiple motors are paired to the same channel.	Always reserve an individual correctly (refer to motor functions) Try to use multi-channel emitters to control multi-motor projects, ensure each channel to control one single motor
The motor doesn't run or starts too slowly or make loud noise	Connections are incorrect.	Check connections
	Incorrect installation or overload	Check installation or overload
The motor stops during the going up or going down.	The motor has reached the lower limit	Adjust the new lower limit
	Running time exceeds 4 min	Let the motor cool for about 20 minutes